


BODY DIMENSIONS

DI-7

BODY OPENING AREAS (Rear View: Swing Type)

(Three-Dimensional Distance)

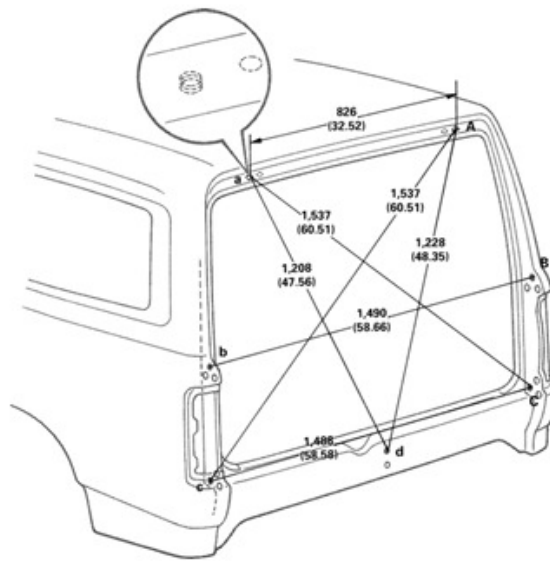

HINT: For symbols, capital letters indicate right side of vehicle, small letters indicate left side of vehicle (Seen from rear).


mm (in.)


Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Back door hinge installation hole	14 (0.55)	C, c	Back door hinge installation nut	8 (0.31) nut
B, b	Back door hinge installation nut	8 (0.31) nut	d	Back door lock striker installation nut	8 (0.31) nut


DI-4

BODY DIMENSIONS

BODY OPENING AREAS (Side View-Front)

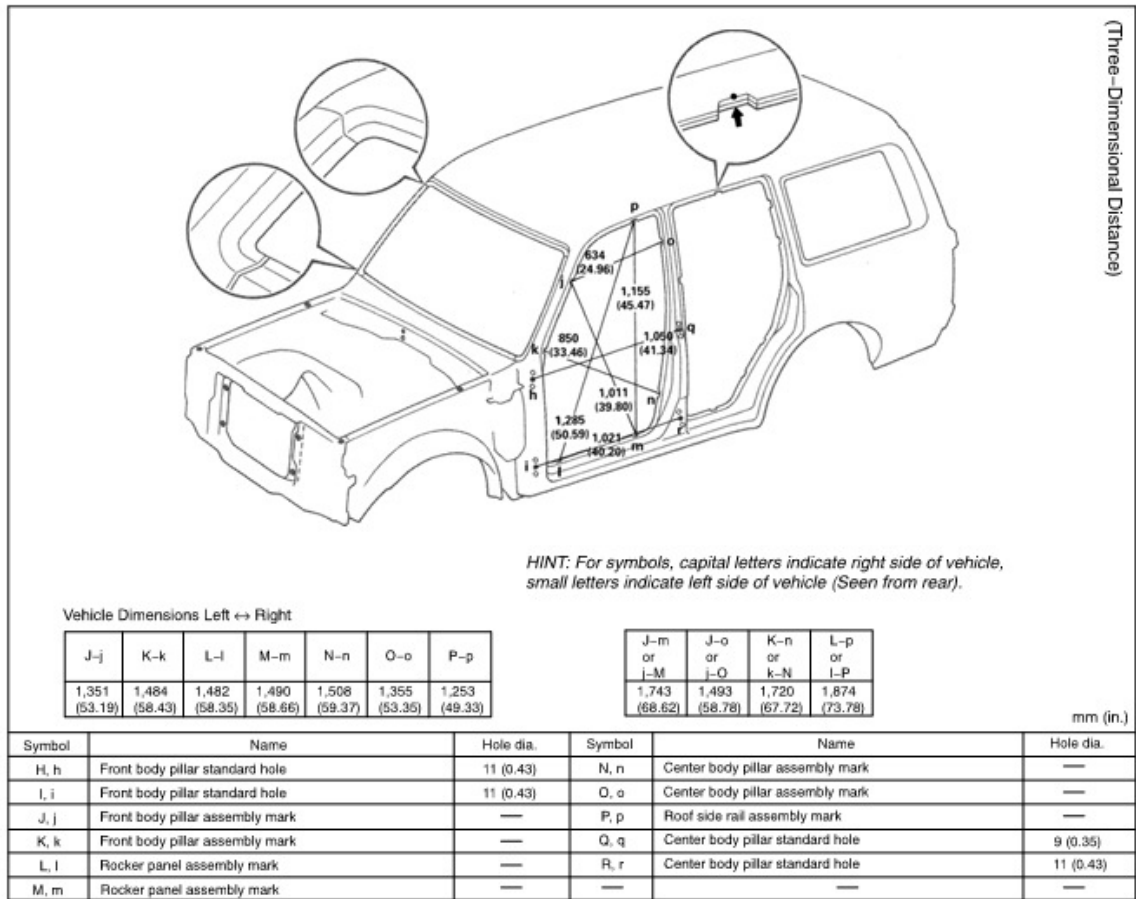

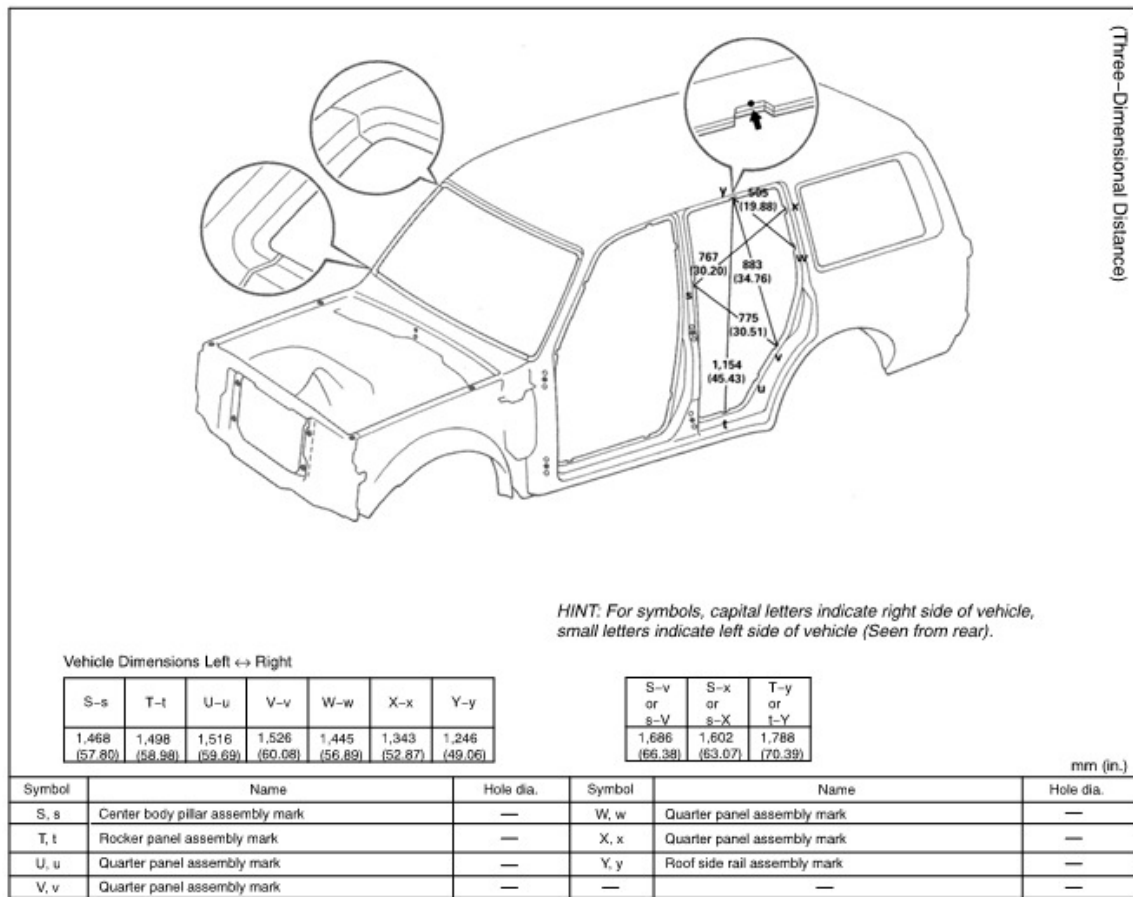


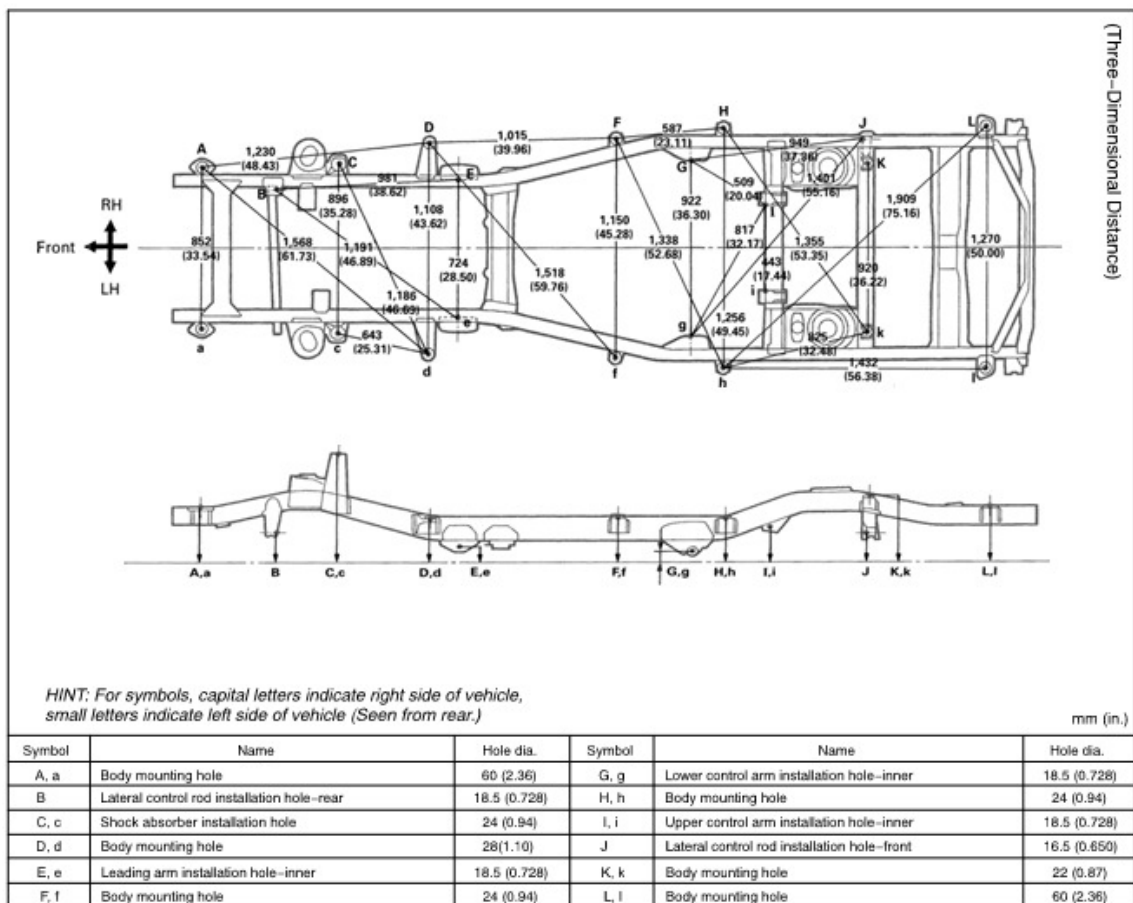


DI-8

BODY DIMENSIONS

FRAME DIMENSION

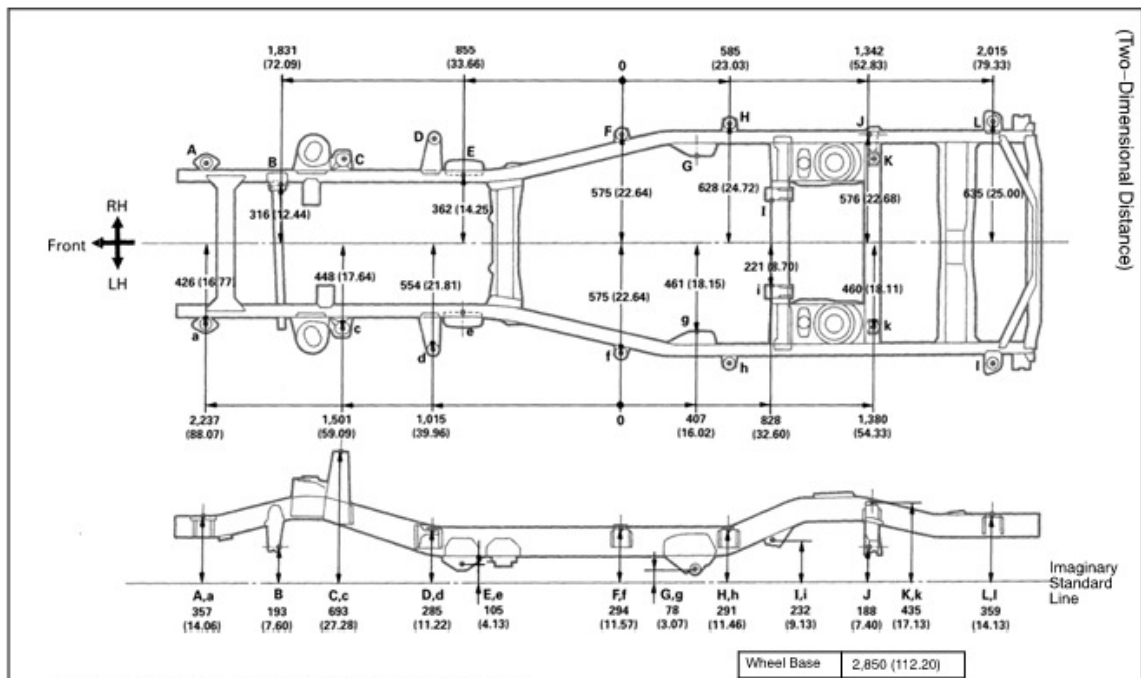


Symbol	Name	Hole dia.	Symbol	Name	Hole dia.
A, a	Body mounting hole	60 (2.36)	G, g	Lower control arm installation hole-inner	18.5 (0.728)
B	Lateral control rod installation hole-rear	18.5 (0.728)	H, h	Body mounting hole	24 (0.94)
C, c	Shock absorber installation hole	24 (0.94)	I, i	Upper control arm installation hole-inner	18.5 (0.728)
D, d	Body mounting hole	28 (1.10)	J	Lateral control rod installation hole-front	16.5 (0.650)
E, e	Leading arm installation hole-inner	18.5 (0.728)	K, k	Body mounting hole	22 (0.87)
F, f	Body mounting hole	24 (0.94)	L, l	Body mounting hole	60 (2.36)

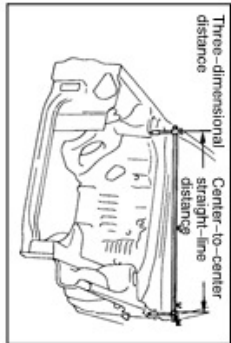

GENERAL INFORMATION



1. BASIC DIMENSIONS

- (a) There are two types of dimensions in the diagram.
 - Three-dimensional distance)
 - Straight-line distance between the centers of two measuring points.

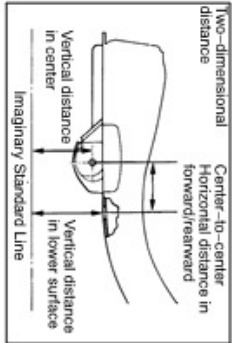


2. MEASURING

- (a) (Two-dimensional distance)
 - Horizontal distance in forward/rearward between the centers of two measuring points.
 - The height from an imaginary standard line.
- (b) In cases in which only one dimension is given, left and right are symmetrical.
- (c) The dimensions in the following drawing indicate actual distance. Therefore, please use the dimensions as a reference.

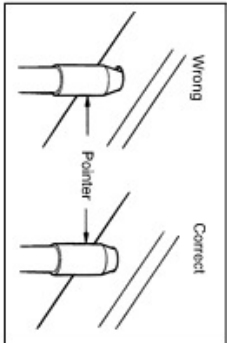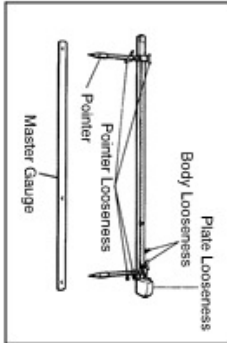


HINT:

1. The height of the left and right pointers must be equal.
2. Always calibrate the tracking gauge before measuring or after adjusting the pointer height.
3. Take care not to drop the tracking gauge or otherwise shock it.
4. Confirm that the pointers are securely in the holes.

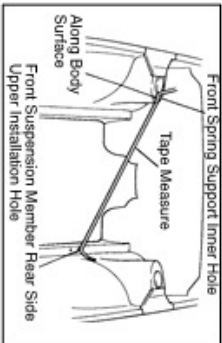

- (c) When using a tape measure, avoid twists and bends in the tape.
- (d) When tracking a diagonal measurement from the front spring support inner hole to the suspension member upper rear installation hole, measure along the front spring support panel surface.

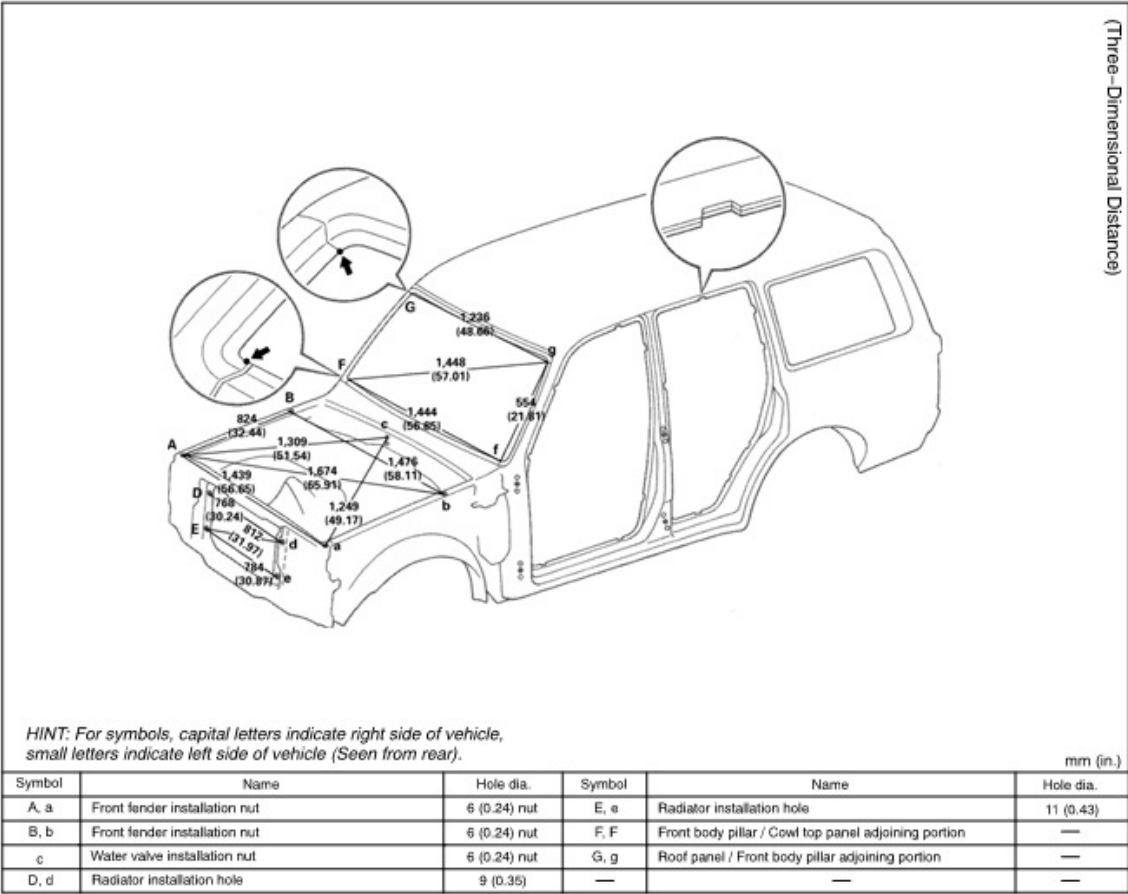

BODY OPENING AREAS (Rear View: Lift Type)

